
Wireless TV Remote #1521

USER'S GUIDE

For Technical Support:
Call our Technical Service Department
Monday through Friday, 9 a.m. to 5 p.m. (EST)
1-800-TEC-TOYS or 1-800-832-8697
customer_support@enablingdevices.com


Enabling Devices

50 Broadway
Hawthorne, NY 10532
Tel. 914.747.3070 / Fax 914.747.3480
Toll Free 800.832.8697
www.enablingdevices.com

Our oversized TV remote control is perfect for viewers with impaired motor coordination. The wireless remote features a large striking area with 2" push buttons. The buttons are clearly labeled with words and symbols for Channel, Sound and On/Off functions. Uses infrared technology. It also will control the latest flat screen TV's. Five input jacks allow you to control the remotes with any of our external Capability switches. (Not Included). *Size: 15¾"L x 10½"W x 3½"H. cannot be used with TV/VCR or TV/DVD combination units or satellite TV. Requires 2 AA Batteries.*

Operation:

1. Please refer to the manufacturer's instruction manual included for programming directions for this remote, with the exception of Step #1: Installing the Batteries. Please see below:
2. The Remote requires 2 AA batteries (Not included). Use alkaline batteries only (e.g. Duracell or Energizer brand). Do not use rechargeable batteries or any other type of batteries because they supply lower voltage and the unit will not perform properly. Never mix old and new batteries together or different brands or types together.
3. You will not be placing any batteries directly into the "Sony" remote as this is permanently affixed to the base. Instead, please locate the battery compartment recessed in the back of the Remote base. The battery compartment cover is secured with a small screw. Use a Phillips head screwdriver to remove this screw and remove the cover. Insert the 2 AA batteries into the compartment paying careful attention to proper battery polarity.
4. Replace the compartment cover and re-secure it with the screw. Test the unit by pressing the ON/OFF button. The red indicator light should blink. If not, change your batteries.
5. All programming will be done through the remote's keypad on the back of this unit. When programming make sure none of the large buttons on the front become activated or depressed, doing so will prevent programming of your TV.

Switch Use:

7. You can plug up to 5 separate switches to control the same functions as the large buttons; this is done via the input jacks located on the front side of the unit.

Troubleshooting:

If you cannot get your Remote to operate your TV, or it will not perform commands properly:

- Make sure that your batteries are fresh and installed correctly (according to proper polarity). *
- If you are using external switches with your remote, make sure they are plugged in all the way, there should be no gaps. Test your switches on other switch adapted devices, to rule out your switches as the source of the problem.
- Read the "Sony's" troubleshooting section of the guide for any additional troubleshooting tips.
- Try ALL of the codes listed for your device. Many set-up codes may allow partial functionality; however, only one code will operate your device correctly.
- Make sure that you are within 6-10 feet of your device, with the remote facing the device, while programming. Make sure that you are within 15 feet of your device when using your remote.
- If the red light on the remote control does not blink when you press a key, replace the batteries with two (2) new AA alkaline batteries. Be sure to install paying close attention to proper battery polarity. *
- * NOTE: When you replace your batteries, or remove them for any reason, you must re-install batteries within 10 minutes, or re-programming your remote will be required. This is why it is important to write down the codes that work for your devices and keep both these manuals in a safe place.

Care of Unit:

The Remote can be wiped clean with any household multi-purpose cleaner and disinfectant. We recommend Simple Green, which is a non toxic biodegradable all-purpose cleaner.

Do not submerge the unit, as it will damage the contents and the electrical components.

Do not use abrasive cleaners, as they will scratch the surface of the unit.